










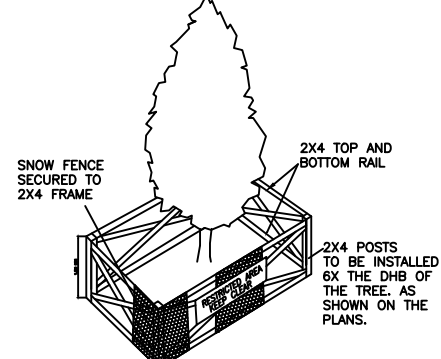


LEGEND

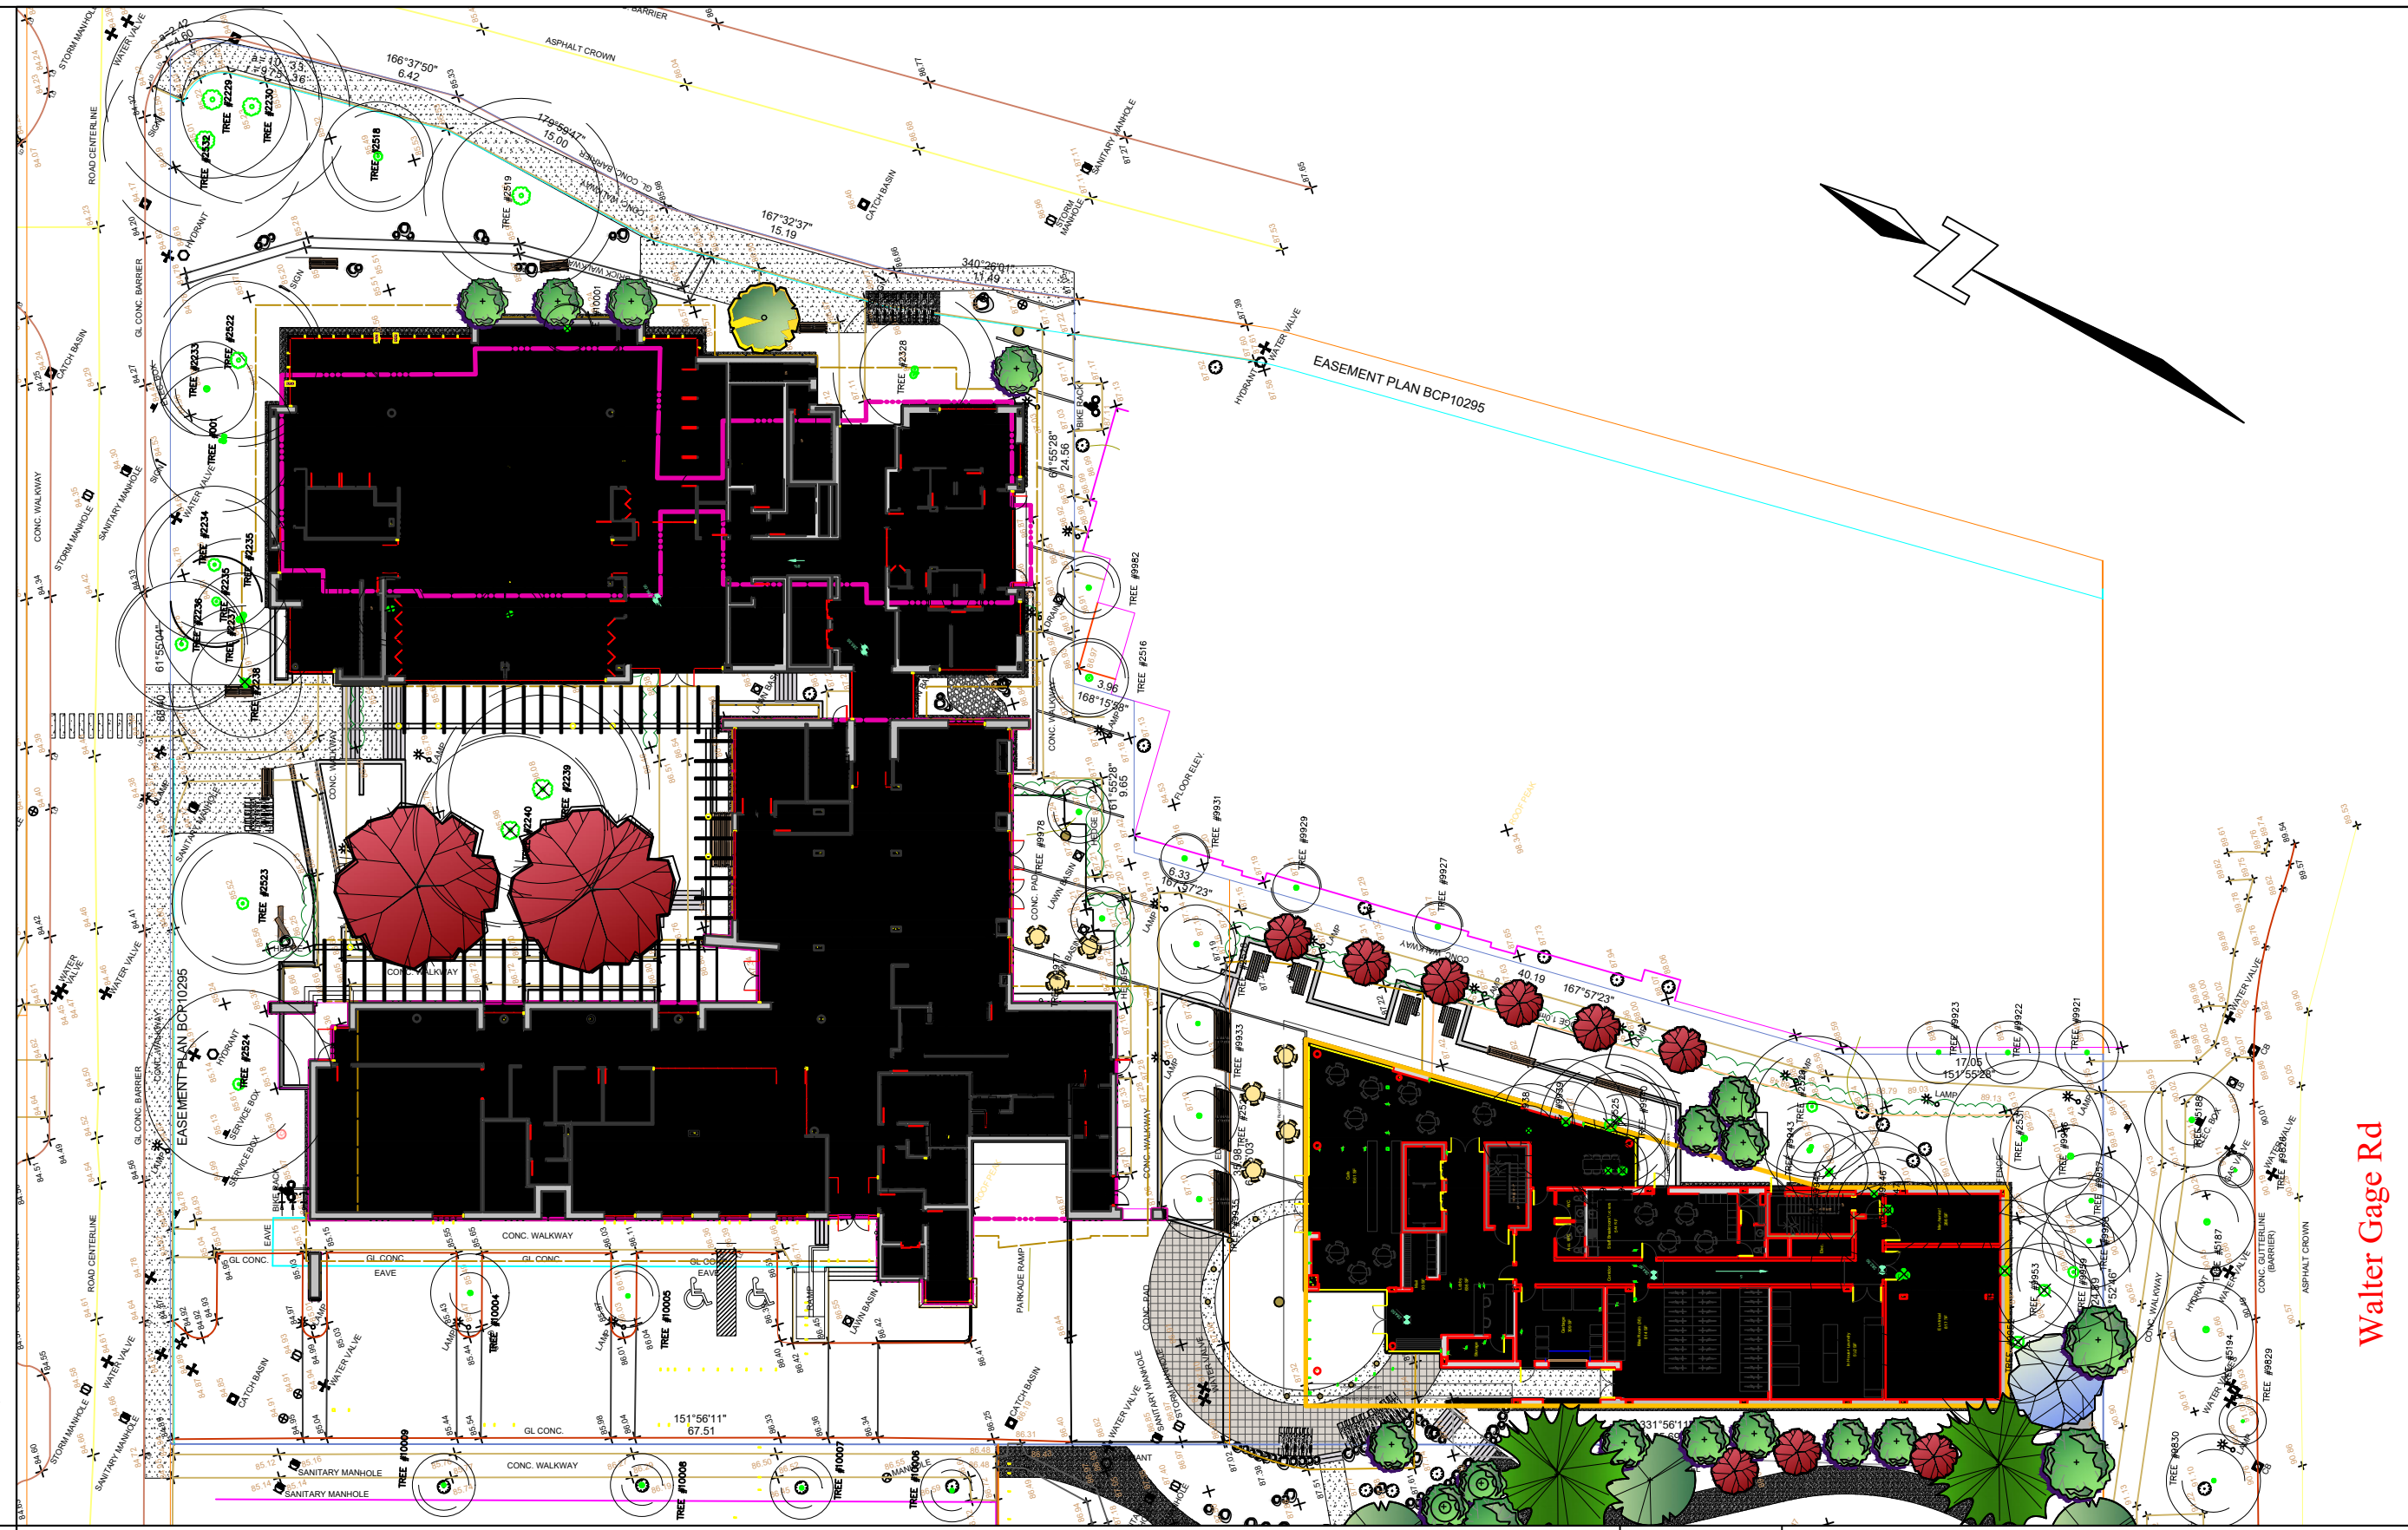
-  TREE TO BE RETAINED
 -  TREE TO BE REMOVED
 -  ROOT PROTECTION ZONE (RPZ)
 -  TREE PROTECTION BARRIER (TPB)
 -  TREE CANOPY AREA (TCA)
 -  REPLACEMENT TREE
 -  BC HYDRO CONNECTION
 -  SANITARY CONNECTION
 -  STORM WATER CONNECTION
 -  GAS CONNECTION
 -  WATER CONNECTION
- ABBREVIATIONS
 S = Shared tree C = City tree O = Off-site tree



TREE PROTECTION BARRIER SCHEMATIC

ARBORIST NOTES & RECOMENDATIONS

- * All replant trees should conform to and meet BCLNA/BCSLA landscaping & ISA Standards.
- * Small growing trees should not be planted within 3m of foundations, fences or outbuildings. Large growing species should be planted 4m away from building foundations.
- * Replacement trees should also be planted 1m away from property lines and 3m away from another tree and not planted in a hedge like manner.
- * Trees with mature heights greater than 5m should not be planted under overhead utility lines and within 3m of the power lines.
- * Grade changes are not recommended within any tree protection barriers unless specified in Arborist Tree Preservation Report.
- * Arborist supervision is required any time work is carried out within any tree protection barrier
- * Tree stumps are not to be removed by excavator around retained onsite and neighboring trees. Remove stumps with a stump grinder.



Walter Gage Rd



GOODE ARBORICULTURE CONSULTING

14186 25a Avenue, Surrey B.C.
 7783174360
 info@goodearboriculture.com

SITE ADDRESS:	5920 Iona Drive, Vancouver BC.
PROJECT #:	0322
DATE:	November 15, 2022
ARBORIST:	Stuart Goode
SCALE:	
REVISION #:	